



## **Instructions for use**

### **IMPORTANT! KEEP FOR FUTURE REFERENCE**

#### **Important Notes**

Before using this high chair, please read all instructions and safety notes carefully.

#### **Instructions for use**

The child must always use the safety strap provided when using the chair.  
Ensure that the safety strap is correctly fitted and the buckle is fastened.  
Adjust for security.

#### **Care and Maintenance**

To clean the high chair, the use of a damp cloth is recommended. Stains can be removed with the use of a household cream cleaner such as "Cif" or equivalent.  
Periodically check the high chair for security of all components, correct operation and freedom of movement of all locking devices and excessive wear of components.

#### **Safety Notes**

##### **WARNING**

##### **Do not leave the child unattended**

Do not use this high chair until the child is able to sit up unaided

Be aware to the risk of open fire and other sources of strong heat such as electric bar fires, gas fires etc. in the vicinity of the highchair

Do not use the high chair unless all components are correctly fitted and adjusted

Ensure that the child is always restrained by the waist strap provided

Do not use the high chair if any part is broken, torn or missing

This high chair conforms to BS EN 14988:2006